



Installation Instructions for: Honda TRX680 [HIDH680]

Kit Includes:

- 2 x 35W 12V Slim Ballast
- 2 x HID 6000K Bulb
- 2 x Mounting Bracket
- 2 x Metal bulb bracket
- 1 x Plug-n-play harness

1

Remove stock bulb by turning counterclockwise. Remove the metal bulb holder by removing the two screws.



6

Remove the stock headlamp wiring harness




2

Press the metal bulb holder onto the HID bulb. Make sure the base of the metal makes contact with the HID bulb base




7

Secure the plug-n-play harness to the stock headlamp wiring harness location. Make sure that the red ballast wire goes to the driver's side ballast.

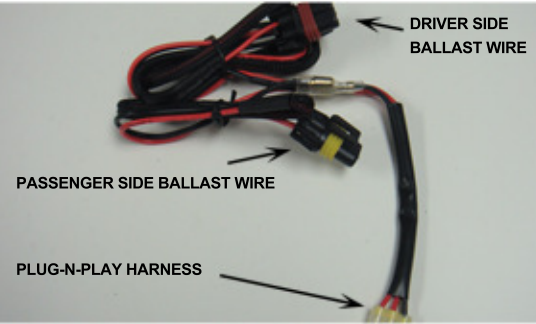


3

Slide the bulb bracket onto the HID bulb. The tabs of the bracket should be bent away from the bulb

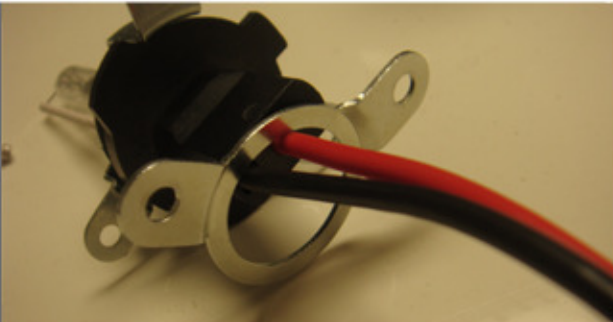

8

Attach the ballast to the ballast plug and attach the plug-n-play harness to the factory wiring harness

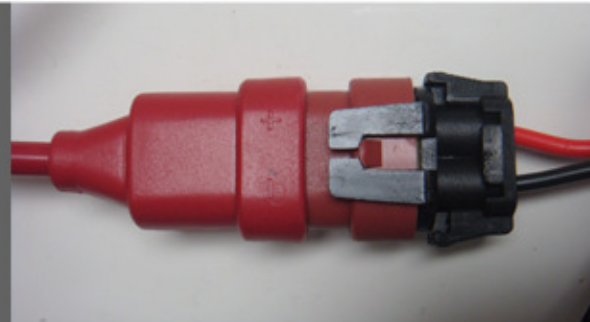

4

Secure the screws and make sure the bulb has a tight fit.



5

Mount the ballast with the L-bracket. Then attach the HID bulb with the ballast.



NOTES:

We recommend upgrading to a 20AMP fuse on the wiring for the headlamp. Upon startup each HID light draws a higher amperage to kick on the Xenon in the bulb. This can cause one or both lights to not light up. If this situation occurs, a 20 or higher AMP fuse will solve the problem. You may also consider installing a relay if problem persists.

If you have other aftermarket items on your vehicle, you may consider purchasing a 320HID to help regulate the power to the headlamp assembly.

DO NOT modify the wiring that runs between the HID bulb and the ballast. Please be aware by doing so, you will void the warranty and may cause the system to work improperly.

Please be careful that your skin does not make contact with the glass portion of the HID bulbs.