



Installation Instructions for: Kawasaki Brute Force [HIDKBF]

Kit Includes:

- 2 x 35W 12V Slim Ballast
- 2 x HID 6000K Bulb
- 2 x Mounting Bracket
- 1 x 320HID Relay Harness
- 1 x Plug-n-play harness


1

Remove stock bulb by turning counterclockwise.




6

Attach the HID bulb with the ballast.

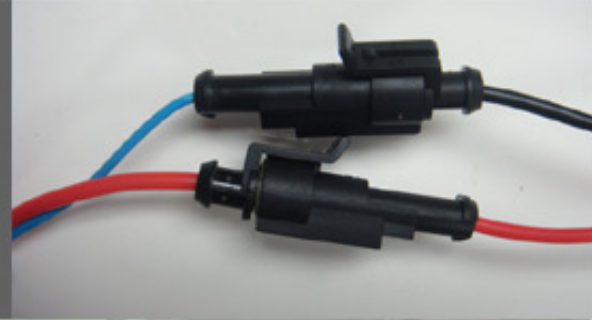


2

Twist in the HID bulb. When twisted fully, the indentation on the housing should be aligned in the middle with the bulb's base cut

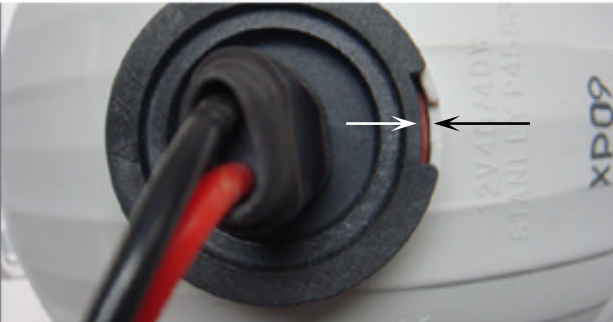

7

Connect the positive and negative Y terminals to the battery. Secure the relay near the battery. Look at picture for suggested mounting location.

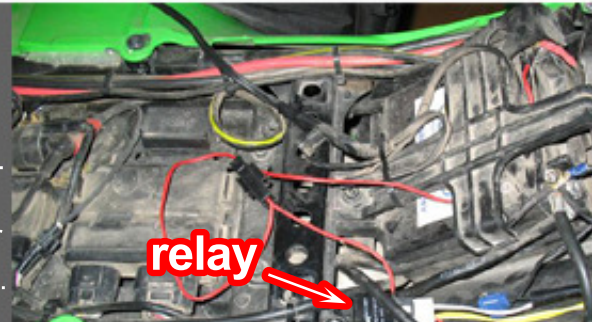

3

For the driver side, connect the plug-n-play harness to the factory headlamp plug




8

Attach the ballast to the ballast plug




4

For the passenger side, the factory headlamp plug would be disconnected. We recommend wrapping this plug with electrical tape

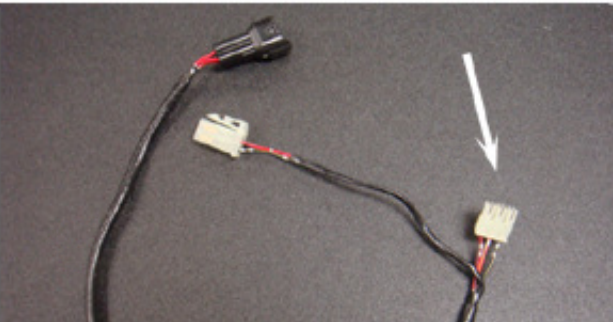

5

Mount the ballast with the L-bracket.

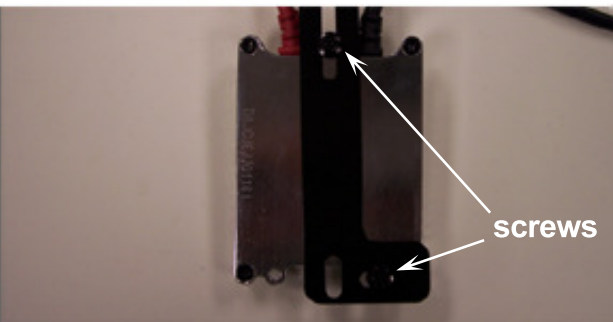

NOTES:

We recommend upgrading to a 20AMP fuse on the wiring for the headlamp. Upon startup each HID light draws a higher amperage to kick on the Xenon in the bulb. This can cause one or both lights to not light up. If this situation occurs, a 20 or higher AMP fuse will solve the problem.

DO NOT modify the wiring that runs between the HID bulb and the ballast. Please be aware by doing so, you will void the warranty and may cause the system to work improperly.

Please be careful that your skin does not make contact with the glass portion of the HID bulbs.